



SOLARWATT Battery flex AC-1

Schaltpläne


1 dreiphasiger WR, Battery flex AC-1, AC-Sensor Flex Direktmessung

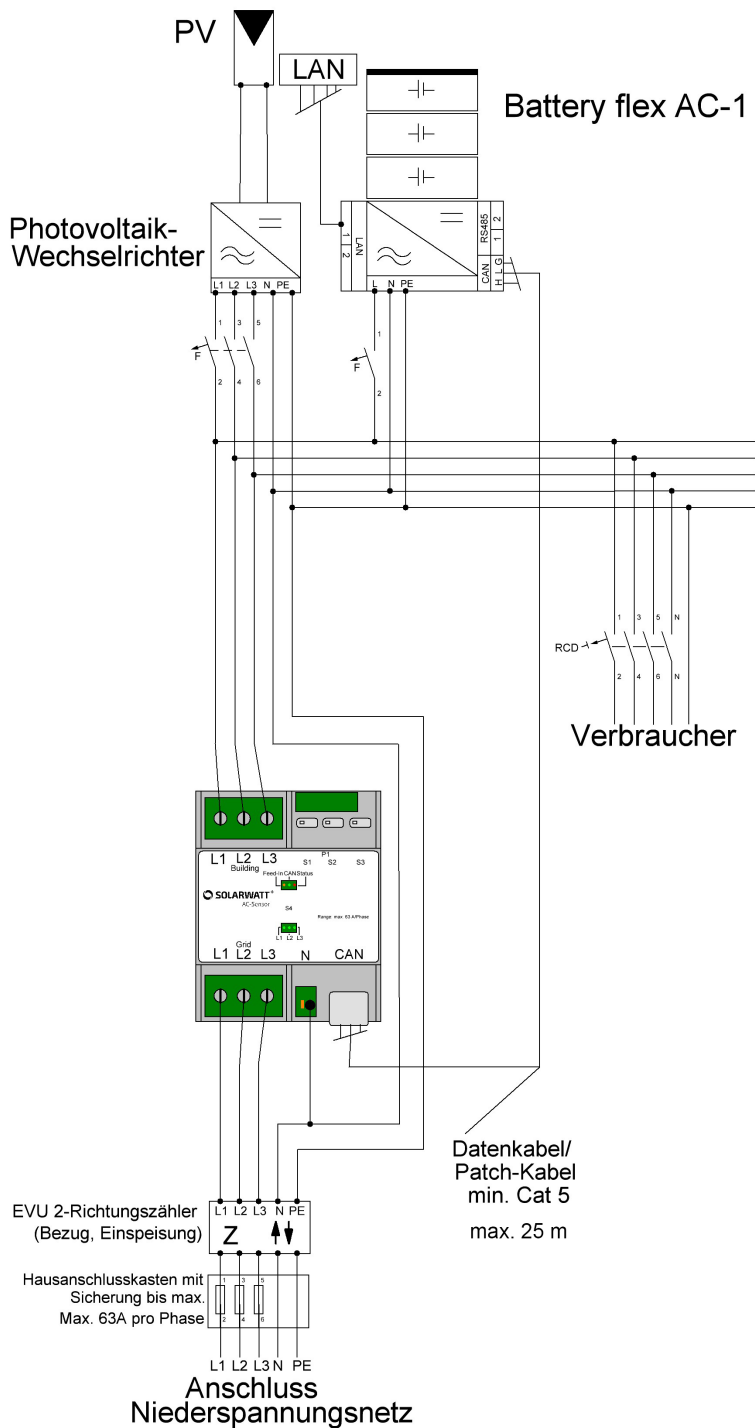

2 einphasiger WR, Battery flex AC-1, AC-Sensor Flex, Manager flex

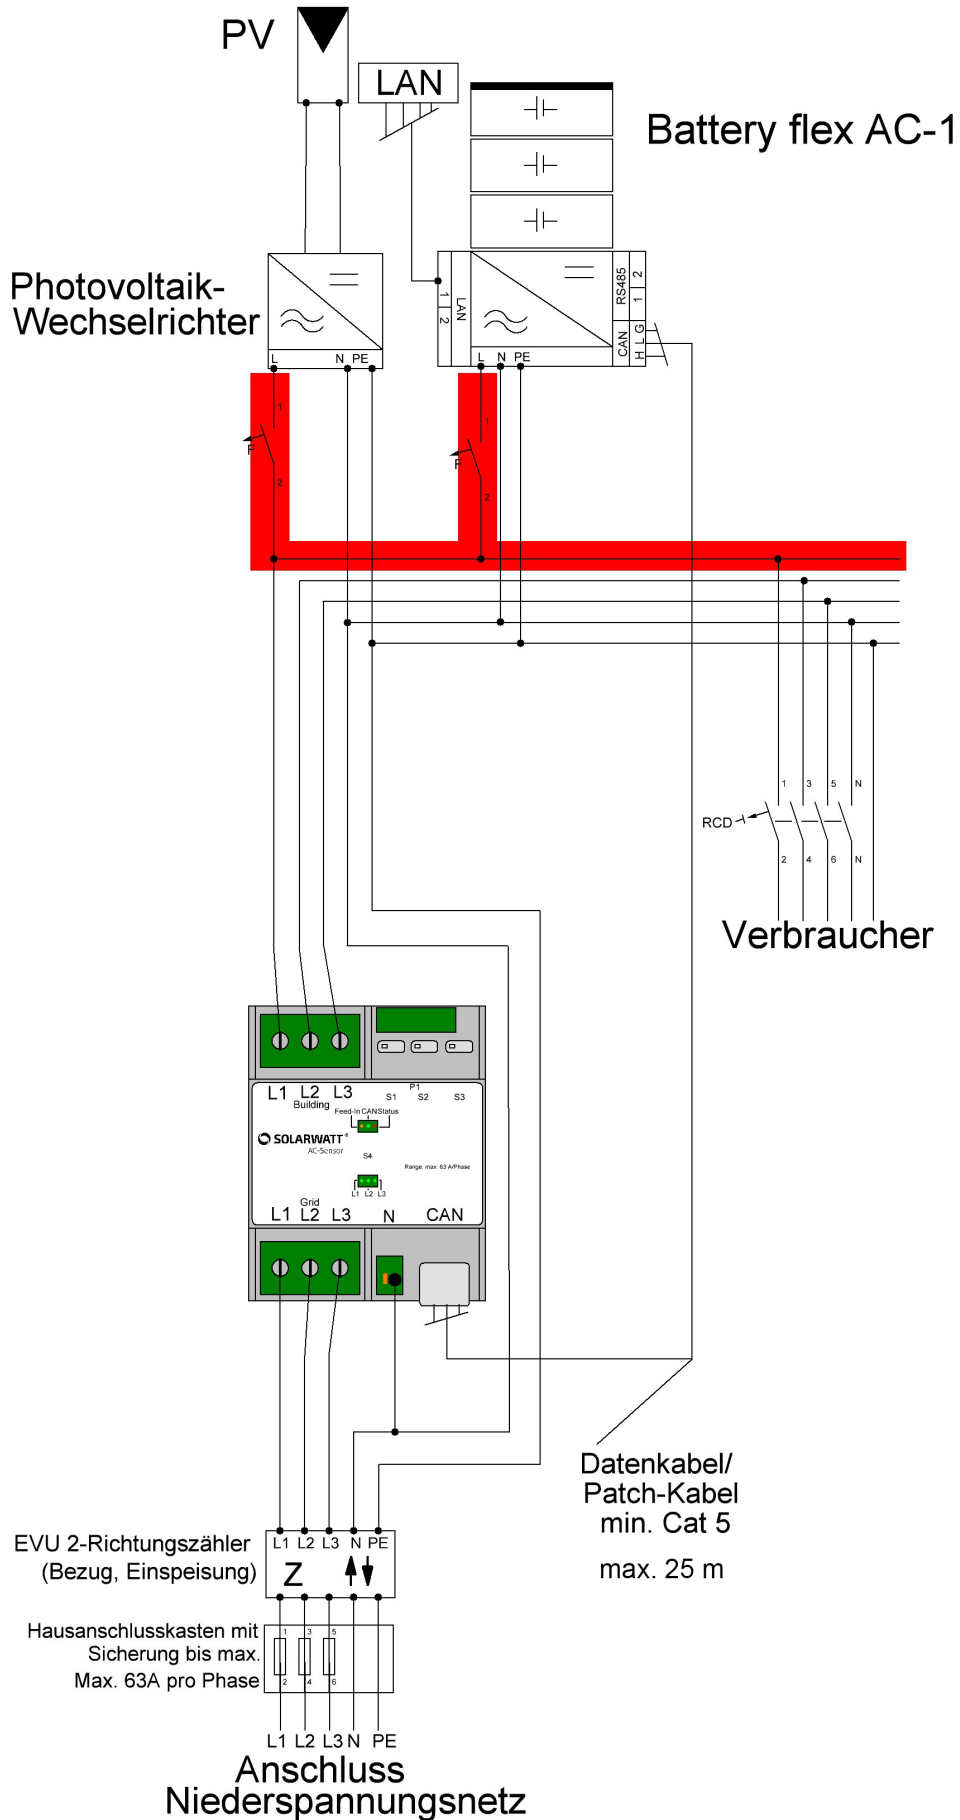

3 dreiphasiger WR, Battery flex AC-1, AC-Sensor Flex Wandlermessung

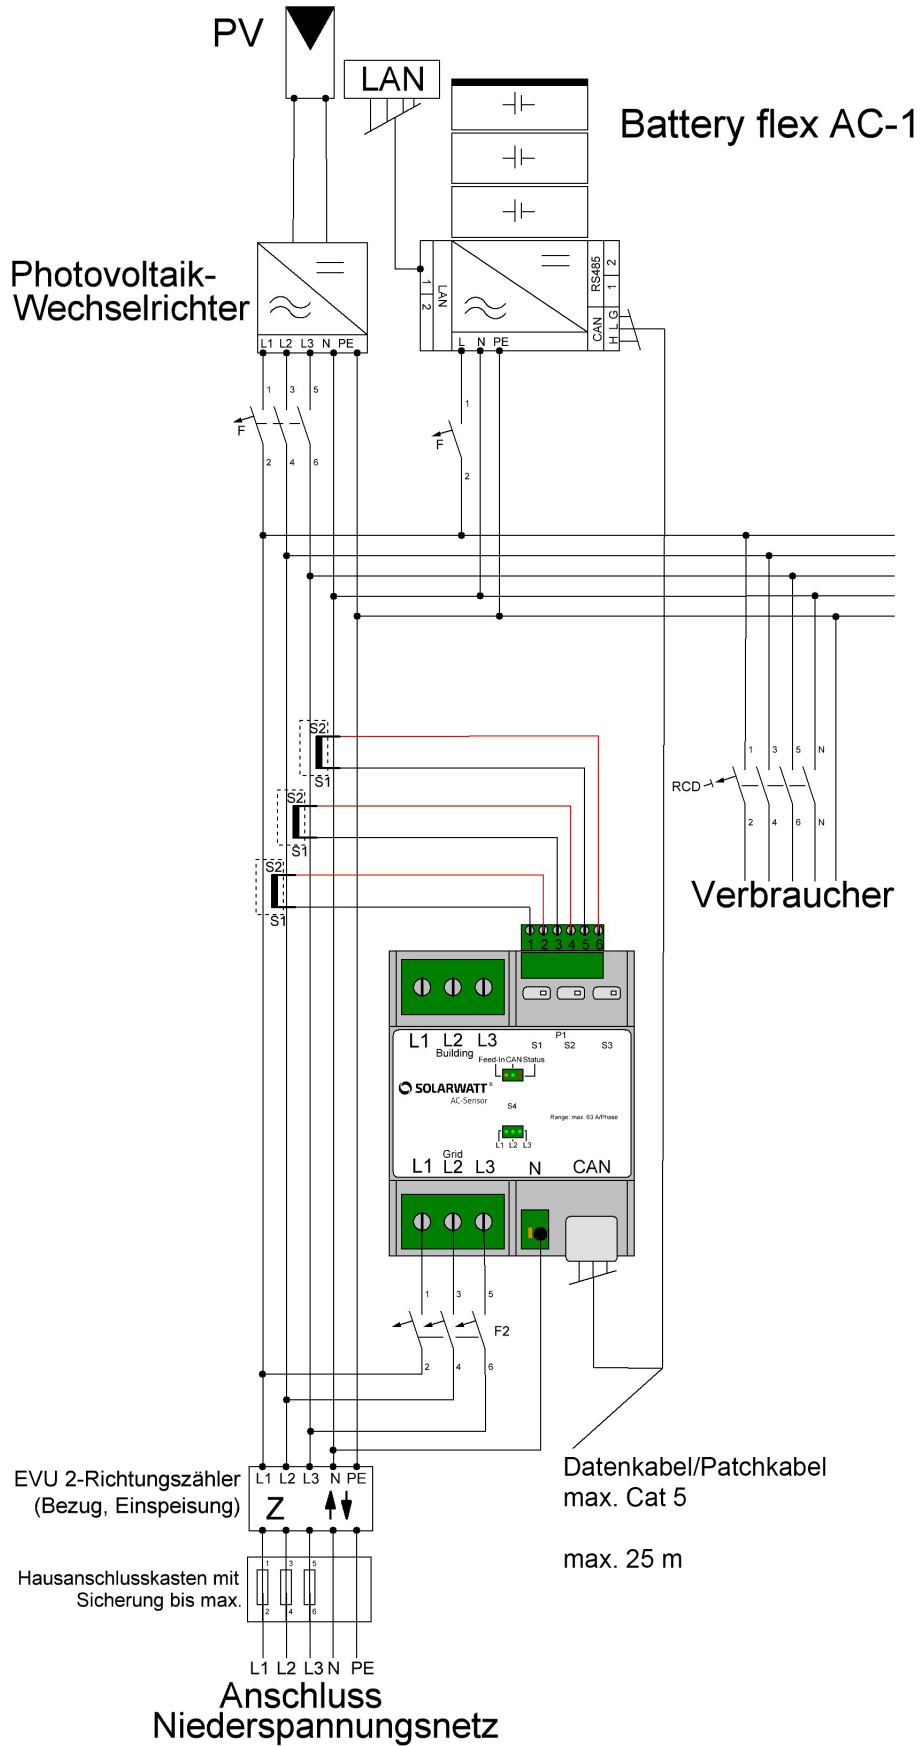

4 einphasiger WR, Battery flex AC-1, AC-Sensor Flex, Manager flex

